Surestep Stepping System Drives


SureStep® Microstepping Drives Accessories

SureStep Pro Drive Configuration Software - for Advanced Stepper Drives

Free Download

SureStep Pro configuration software is available as a free download from our website for SureStep advanced drives (STP-DRV-4850 & -80100).

- Used for easy configuration and setup of the drive, including drive, motion control mode, I/O, motor.
- Serial command language for motor drive control via serial port; eliminates the need for separate motion controllers or indexers; provides easy interface to other industrial devices such as PCs, PLCs and HMIs.
- Easily use the ASCII output commands from most of our PLCs to enable indexing capability.
- Help files include technical data, application information, advanced setup, serial command instructions.
- Runs on 32-bit/64-bit Windows 7 and XP operating systems.

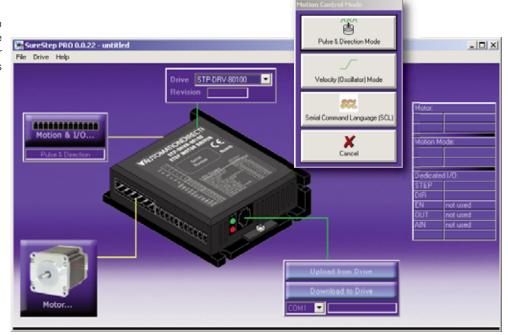

SureStep Drive Configuration Software - for Advanced Stepper Drives		
Part Number	Price	Description
STP-PRO *	<>	Windows-based configuration software for use with <i>Sure</i> Step STP-DRV-4850 and STP-DRV-80100 advanced stepper drives. Requires Windows XP or Windows 7 (32 or 64-bit) operating system, minimum 12MB hard drive space, and RS-232 port (software also compatible with USB-RS232 adapter).
* Available for purchase on CD or can be <u>downloaded for free</u> from AutomationDirect Web site (www.AutomationDirect.com).		

Company Informatio

Systems Overview

Programmable Controllers

Field I/O

Software

C-more & other HMI

Drives

Soft Starters

Motors &

Steppers/

Motor Controls

> Proximity Sensors

Photo Sensors

Limit Switches

Encoders

Current Sensors

Pressure Sensors

Temperature

Pushbuttons/ Lights

Process

Relays/ Timers

Terminal Blocks & Wiring

Power

Circuit Protection

Enclosures

Toolo

Pneumatics

Safety

Appendix

Product Index

Part #